




# DYNAPLATES

## INSTALLATION INSTRUCTIONS

(ITEM #'S: 4006, 4008, 4012 & 4018)

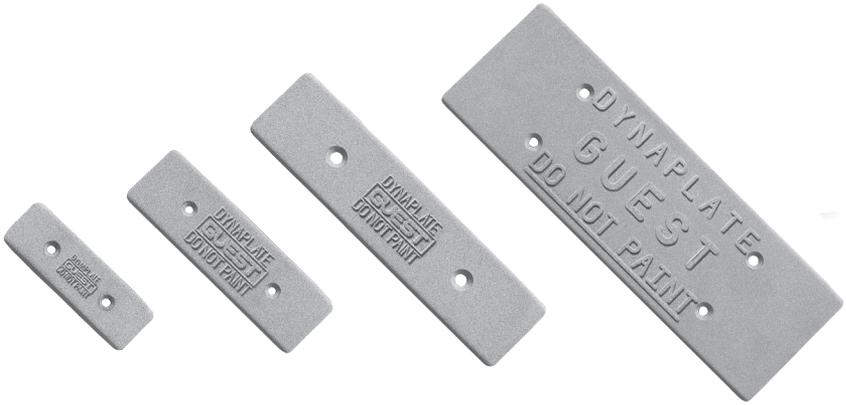

### Description

The Guest Dynaplate is made from thousands of tiny bronze spheres bonded together by heat and pressure into a porous plate. This porosity makes the Dynaplate ideal for use in electrical bonding systems. It can also be used in RF applications such as grounding SSB and LORAN antennas for improved performance. NOTE: Minor discoloration does not effect performance.

### Installing the Dynaplate

Required tools and materials:

- Electric drill with drill bit (see table below)
- Wrench (see table below)
- Large slot-head screwdriver
- Caulking suitable for underwater use (StarBrite™83301 or similar)

Dynaplate Item #	Wrench required	Drill bit required
4006, 4008	7/16"	1/4" (6mm)
4012, 4018	9/16"	3/8" (9mm)

### Step 1: Choosing a mounting location

Choose a mounting location that will always be submerged, even when the vessel is planing or heeling over.

- On a powerboat, the best location is usually any flat area on the aft third of the bottom of the hull within a few feet of the vessel's centerline. (Avoid mounting the Dynaplate on the vessel's transom. When underway, it may only have intermittent contact with the water.)
- On a sailboat, a flat location on the aft half of the hull and close to the centerline is best.

Avoid mounting your Dynaplate immediately forward of any depth finder or knot meter transducers. The gentle turbulence directly aft of the Dynaplate may affect the performance of some devices. Propellers are not affected.

Consider the thickness of the hull when choosing a mounting location. The combined thickness of the hull and a backing plate (not included) should not exceed 1½" (3.8 cm) to allow use of the supplied 3" (7.6 cm) fasteners.

When choosing a mounting location, be sure you will have access to the inside of the hull in that area to tighten fasteners and make wiring connections. Avoid areas where drilling may damage fuel or water tanks, plumbing, or wiring.

### Step 2: Preparing the mounting location

After you have selected a location for your Dynaplate:

- 1) Prepare a backing plate to mount inside the hull behind the Dynaplate. This plate should be no smaller than the Dynaplate, and a minimum of 1/2" (12mm) thick. The backing plate can be made from marine-grade plywood, a hardwood such as mahogany or oak, or fiberglass.
- 2) Use the Dynaplate as a template to mark the locations of its mounting holes onto the backing plate. Use the table shown under "Required tools and materials" to determine which size drill bit you will need, then drill the holes in the backing plate at the marked locations.
- 3) Hold the Dynaplate against the outside of the hull where you plan to mount it. Align the Dynaplate parallel with the centerline of your vessel, with its sloped ends pointing fore and aft.
- 4) Observe the gap between the Dynaplate and hull. If any edge of the Dynaplate is more than 1/4" (6 mm) from the surface of the hull, select a flatter mounting location.
- 5) If the mounting location is suitable, use a pencil to mark the centers of the holes in the Dynaplate onto the hull.
- 6) Drill one hole at one marked location on the hull. Before drilling any other holes, examine the inside of the hull to confirm that the mounting location is suitable. Then drill the other hole(s) through the hull at the marked location(s).



## INSTALLATION INSTRUCTIONS: DYNAPLATES

---

### Maintenance

Do not paint the Dynaplate. Paint will prevent proper grounding. It is difficult for barnacles to attach themselves onto its porous surface. Clean with stiff brush and bleach. Inspect annually.

P-12D34	1/4"-20 sil. brz. bolt	4006, 4008
P-12D35	1/4"-20 sil. brz. bolt-gold plated	4006, 4008
P-13A27	1/4"-20 sil. brz. nut	4006, 4008
P-13A28	1/4"-20 sil. brz. nut-gold plated	4006, 4008
P-11D03	1/4" sil. brz. washer	4006, 4008
P-12D36	3/8"-16 sil. brz. bolt	4012, 4018
P-12D37	3/8"-16 sil. brz. bolt-gold plated	4012, 4018
P-12A29	3/8"-16 sil. brz. nut	4012, 4018
P-13A2A	3/8"-16 sil. brz. nut-gold plated	4012, 4018
P-11D04	3/8"-16 sil. brz. washer	4012, 4018

### LIMITED WARRANTY

For customer convenience, Marincos warranty is located at [marinco.com/limited-warranty](http://marinco.com/limited-warranty).

Marinco is a proven industry leader, with a Global network of sales, distribution, and service. Product concerns as related to Form, Fit and Function may be submitted online at [marinco.com/limited-warranty](http://marinco.com/limited-warranty).

Please fill in the online form titled Marincos RMA Request and we will contact you with any questions or concerns.