



703-500A INSTRUCTIONS

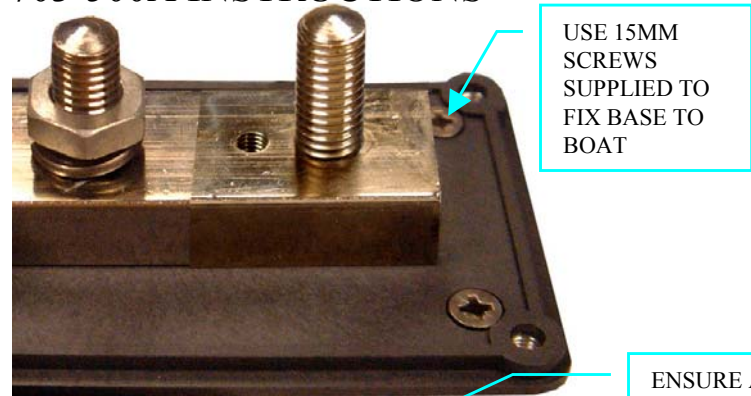


USE 15MM SCREWS SUPPLIED TO FIX BASE TO BOAT

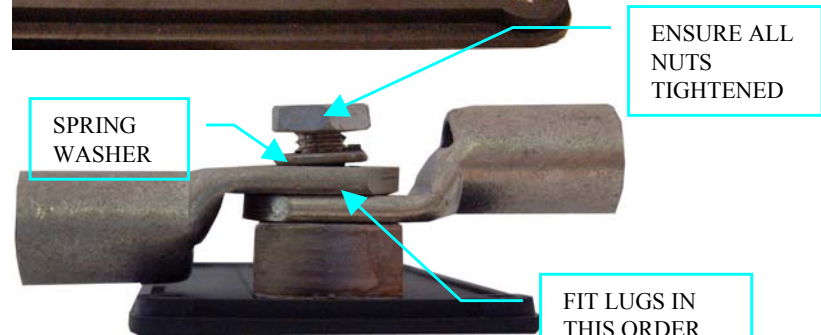


ENSURE ALL NUTS TIGHTENED


SPRING WASHER

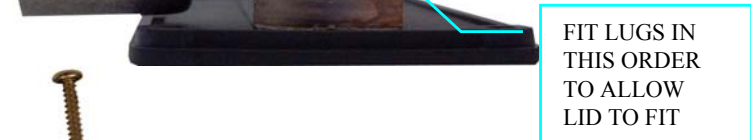

FIT LUGS IN THIS ORDER TO ALLOW LID TO FIT

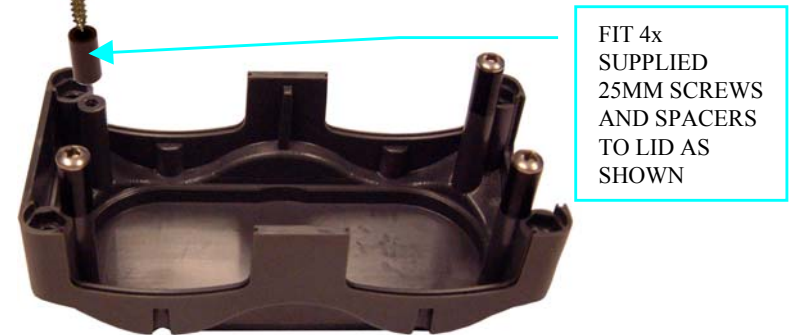


FIT 4x SUPPLIED 25MM SCREWS AND SPACERS TO LID AS SHOWN

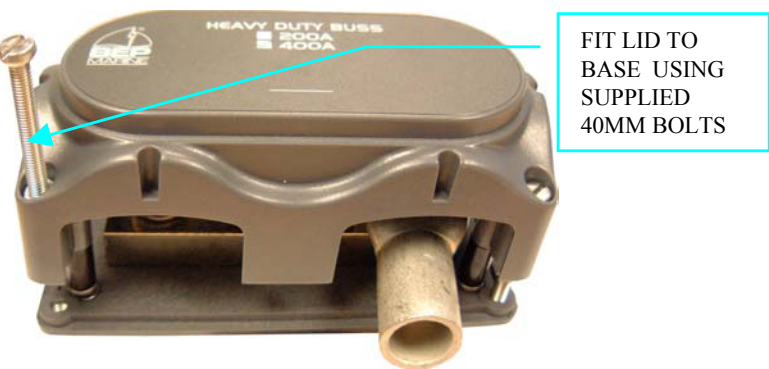


FIT LID TO BASE USING SUPPLIED 40MM BOLTS

703-500A INSTRUCTIONS

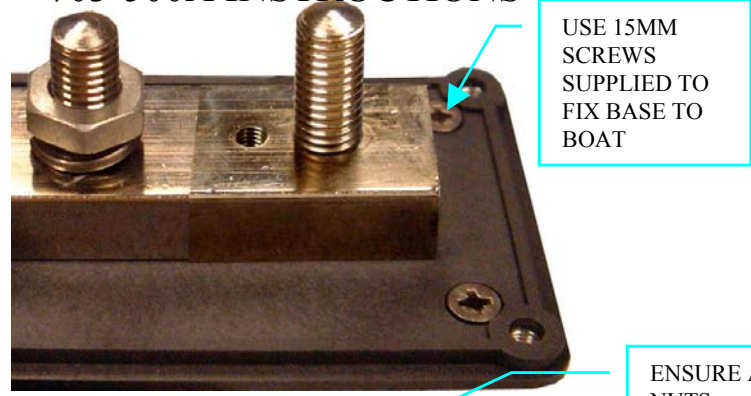


USE 15MM SCREWS SUPPLIED TO FIX BASE TO BOAT

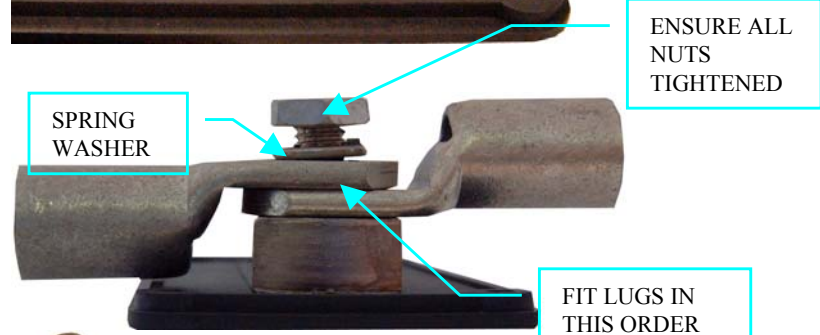


ENSURE ALL NUTS TIGHTENED


SPRING WASHER

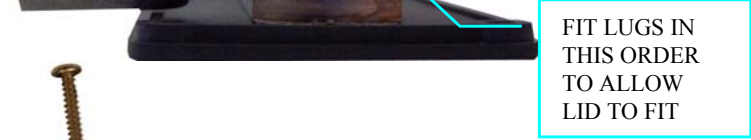

FIT LUGS IN THIS ORDER TO ALLOW LID TO FIT

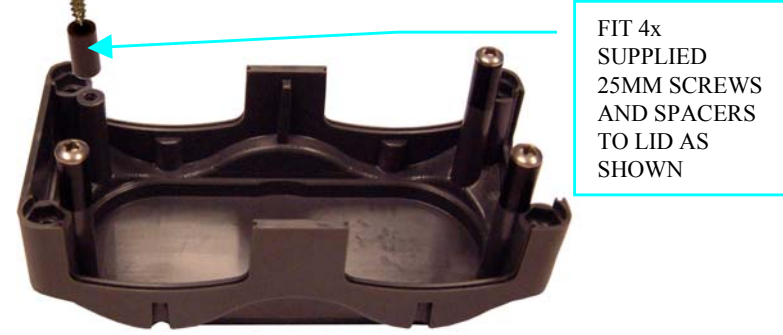

FIT 4x SUPPLIED 25MM SCREWS AND SPACERS TO LID AS SHOWN

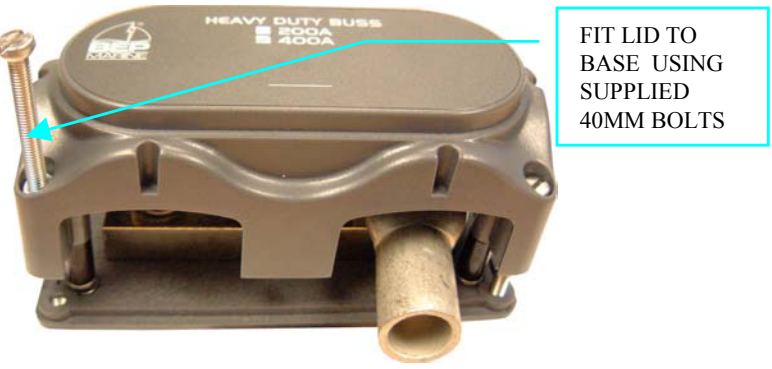

FIT LID TO BASE USING SUPPLIED 40MM BOLTS