

MARINCO®

**12-Volt Fold-Away Fan
902**

Installation Instructions

12-Volt Fold-Away Fan

Model 902

Tools (Not Included):

- Drill
- 1/8" Drill bit
- #6 Phillips Head Screwdriver
- (2) #6 screws

Read Carefully Before Installing.

The 12-volt Fold-Away Fan can be mounted vertically or horizontally. It can be used for windshield defogging as well as cooling.

Mounting

- Drill two 1/8" starting holes for two #6 screws using template on Page 3. (Template approximate-please measure)

Note: Before drilling, make sure the Fan will not be obstructed in any desired position.

Connecting Power:


Your fan operates on 12 VDC only!

- Attach the positive (+) wire from the fan to the 12 volt positive terminal.
- Attach the 12 volt negative (ground) connection to the negative fan wire.

Note: Reverse polarity will cause the Fan to run backwards. It will not damage your Fan. To correct, reverse wire connections.

The current draw of this fan is 0.8 Amps. A 1 1/2 amp fuse is required.

Installation Instructions

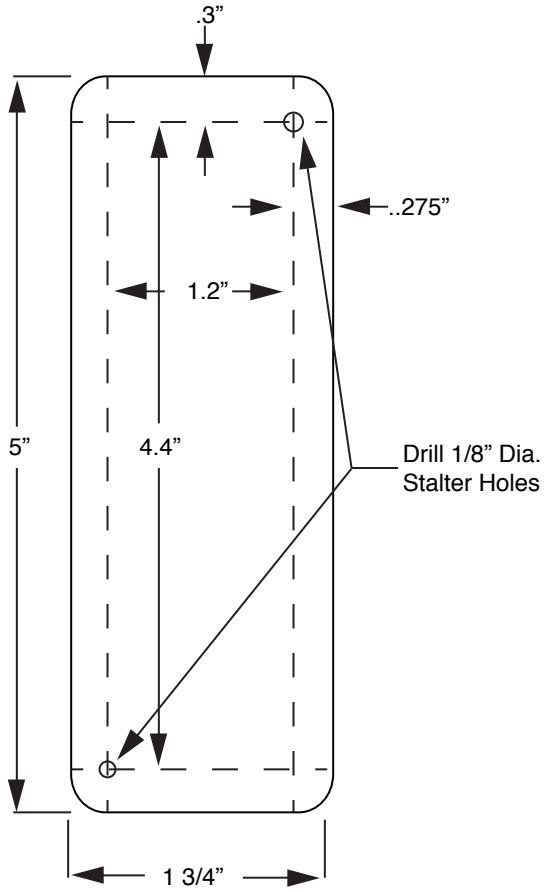

Note: Not a template

Warranty information: www.marinco.com/limited-warranty

MARINCO®

www.marinco.com | 800.307.6702